HONDA

INSTALLATION INSTRUCTIONS

Accessory	Application	Publications No.
IN-DASH CD CHANGER	2001 PASSPORT	AII 21962
		Issue Date JULY 2000

PARTS LIST

CD Changer
P/N 08A50-ED1101

CD Changer

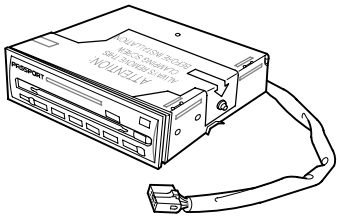

Owner's Manual

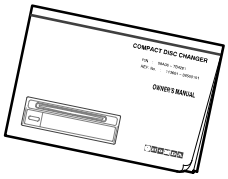

4 Screws

CD Changer Attachment
P/N 2-90101-821-0

Right bracket



Left bracket

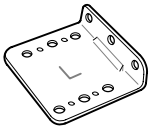

TOOLS REQUIRED

#2 Phillips screwdriver

Ratchet

8 mm Socket

INSTALLATION

Customer Information: The information in this installation instruction is intended for use only by skilled technicians who have the proper tools, equipment, and training to correctly and safely add equipment to your vehicle. These procedures should not be attempted by "do-it-yourselfers."

1. Write down the customer's radio station presets; the radio memory will be erased when you disconnect the battery.
2. Disconnect the negative cable from the battery.
3. Remove the ashtray. On A/T models, with the parking brake set, move the shift lever to the "L" position.

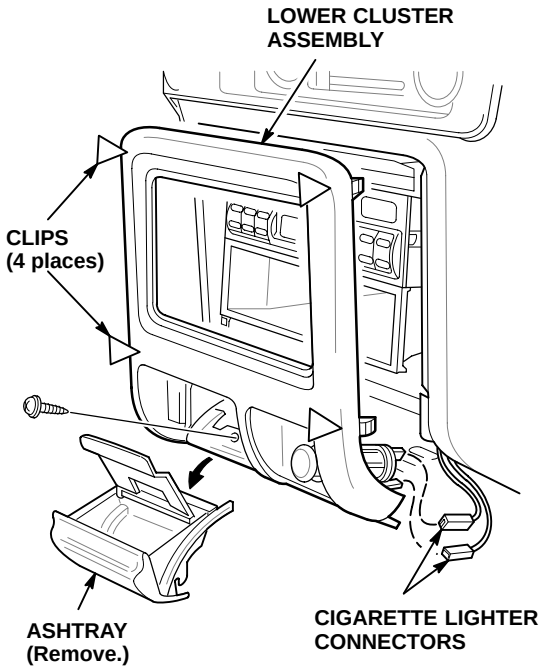

4. Remove the lower cluster assembly (one screw, and gently pull to release the four retaining clips; then unplug the cigarette lighter connectors).

© 2000 American Honda Motor Co., Inc. – All Rights Reserved

5. Remove and retain the four screws securing the audio unit. Unplug the 16-pin connector and the antenna lead, and remove the audio unit.

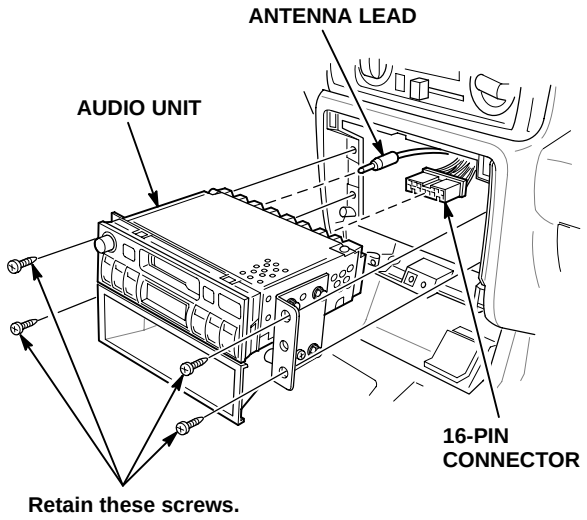

6. Remove and discard the brackets, screws, and the pocket from the audio unit. Retain the four audio unit bracket screws.

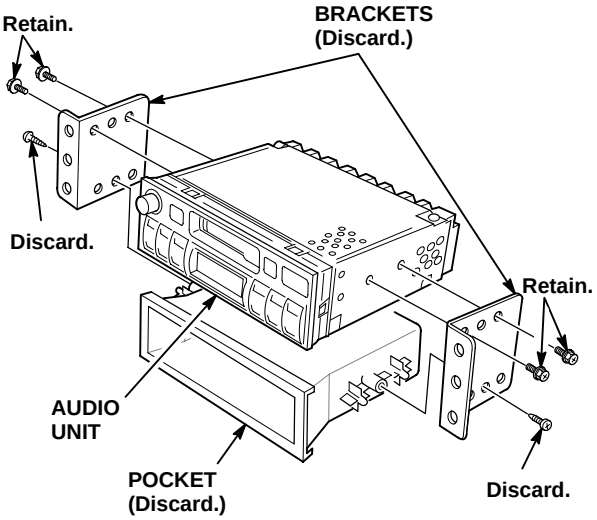

7. Remove and discard the shipping screws and wrapper from the CD changer.

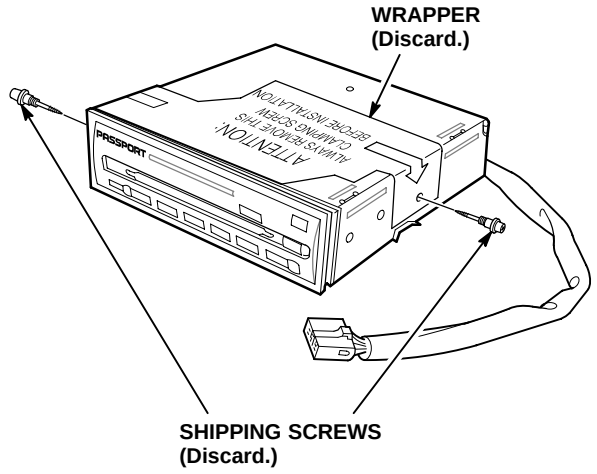

8. Place the audio unit on top of the CD changer. Using the mounting brackets (sold separately), attach the right and left brackets to the audio unit and the CD changer using the four screws supplied with the mounting brackets, and the four screws removed in step 6. Tighten the screws securely.

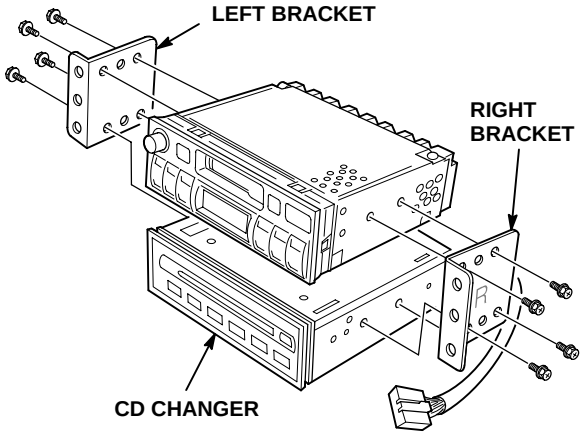

9. Plug the 12-pin connector from the CD changer into the back of the audio unit.

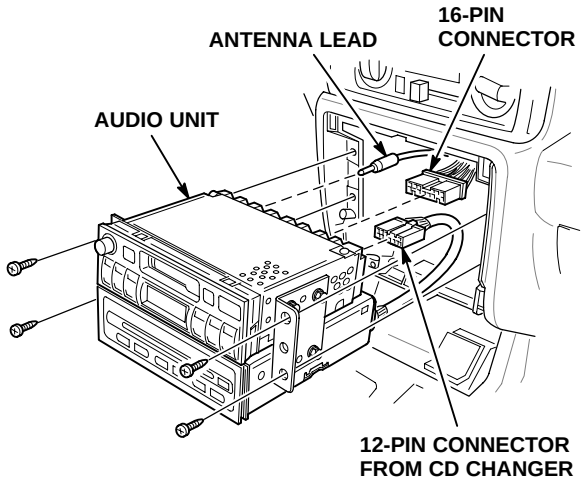

10. Plug the 16-pin connector and the antenna lead into the audio unit, then reinstall the audio unit assembly.
11. Reinstall the lower cluster assembly.
12. Reconnect the negative cable to the battery.
13. Check that the CD changer operates according to the owner's manual supplied with the CD changer.
14. Reset the clock and the radio station presets.
15. Put the CD changer owner's manual in the glove box for your customer.

AII 21962 (0007)
© 2000 American Honda Motor Co., Inc. – All Rights Reserved